 


UPERFECT 15.6" FHD Portable Monitor Touchscreen

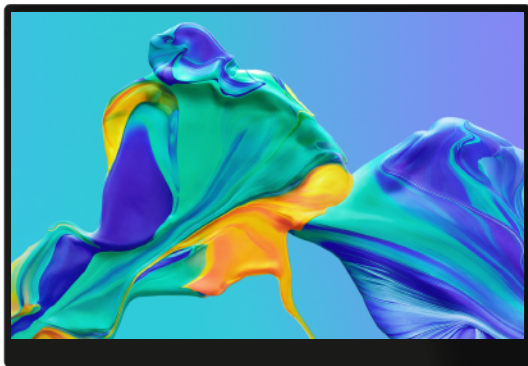

In order to ensure your safe use of this product, please read this manual carefully before using this product and keep it properly.



Email: uperfectglobal02@163.com

Chapter 01 Preparations

Checking the Package Contents



Portable Monitor



Power Adapter



Smart Cover



 
Mini HDMI Cable



Type-C to Type-C Cable



USB A- to Type-C Cable



User Guide

Note:

 
- If any of the above items is damaged or missing, please contact us immediately. (upertextglobal02@163.com)
- The appearance of the components may differ from the images shown.

A



Step1: Place the holster as shown above, part "1" is magnetic.

B

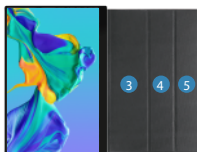

Step2: Place the monitor as shown above, part "1" can be sticky.

C



Step3: Fold the Leather cases part "5" to part "4" as shown.

D



Step4: Stand up the monitor and adjust the angle

Monitor Introduction



A: Power/Back Button

Long press to turn on/off the monitor.

Short press to go back to the previous step.

B: Pulley Button

Scroll up to open the Volume menu, then scroll up and down to adjust the volume.

Scroll down to open the Brightness menu, then scroll up and down to adjust the brightness.

Press the Pulley button to enter the OSD (On Screen Display) menu. Scroll up and down in the menu to control the cursor, and press the Pulley button to Confirm.

C: 3.5mm Audio Jack

For headphones.

D: Mini HDMI Port

Audio and Video signal transmission.

E&F: Type C 3.1 Port

For power and signal transmission.

G: Speakers

Built-in dual speakers 2*8Ω 1W.

Chapter 02 Specifications

Panel Type	IPS Screen
Size	15.6 inches
Aspect Ratio	16 : 9
Resolution	1920 * 1080
Viewing Angle	178°
VESA Hole Spacing	75*75mm
VESA Thread Size	M4*4mm
Built-in Speakers	8Ω/1W*2
Input Interface	Mini HDMI*1, Type-C to Type-C*2, 3.5mm Audio Jack
Refresh Rate	60 Hz
Show the Number of Colors	16.7M(8bit)
Touch Screen	10-Points Touch Screen Technology

Chapter 03 Connecting

 
TYPE-C signal transfer

Note: For a more stable power supply, it is recommended to use our original power adapter to power.



Mini HDMI signal transfer


- Note:**
1. For a more stable power supply, it is recommended to use our original power adapter to power.
 2. When connecting to HDMI device, you need to power the monitor firstly, and then connect the HDMI to Mini HDMI cable.
 3. Game devices such as XBOX/PS5/SWITCH cannot use the touch function when connected to a touch monitor, as the device does not support it. Only Steam Deck game console supports.

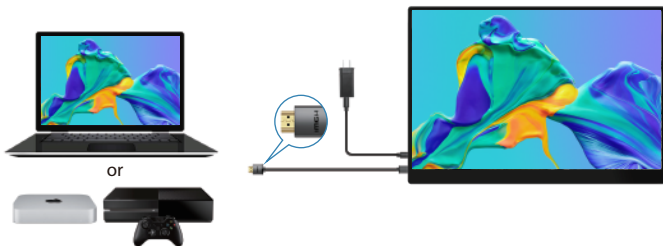

Chapter 04 OSD Menu Introduction

On-Screen Display Menu Introduction

 
BRIGHTNESS

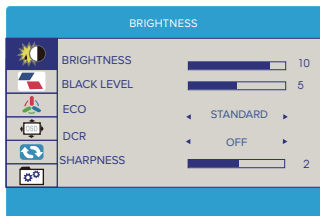


IMAGE



 
COLOR TEMP

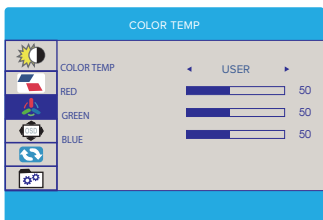

OSD SETTING

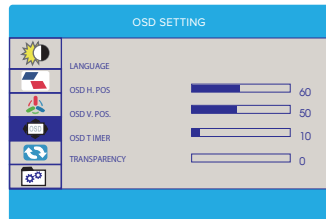 

RESET

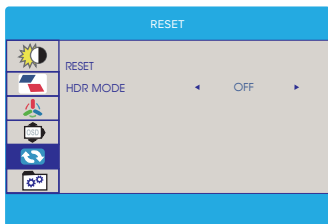 

MISC



Chapter 05 Setting Up(Windows10)


Extend Mode /Duplicate Mode/Display Mode

Way1: Set on the device'Display Settings

A: Verify that your cables are connected properly to the new monitors.

B: Right-click anywhere on your desktop and select Display settings to open the Display page.

 
C: Scroll down to Multiple displays, then select an option from the drop-down list to determine how your desktop will display across your screens. For the largest work area, select Extend desktop.

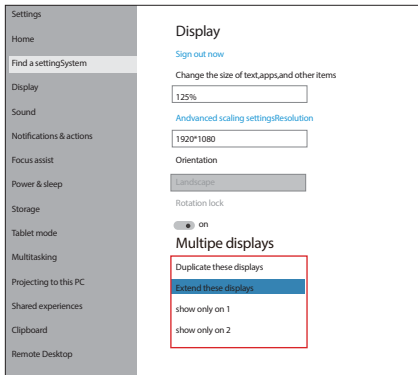

Note: If you cannot see the additional monitor(s) listed, click Detect. If does not work, try restarting your computer and do steps again.

Way2: Set via Windows key + P keyboard shortcut

 
- A: Verify that your cables are connected properly to the new monitors.
- B: Enter the "Windows" key and "P" keyboard at the same time.
- C: select an option from the drop-down list to determine how your desktop will display across your screens. For the largest work area, select Extend desktop.

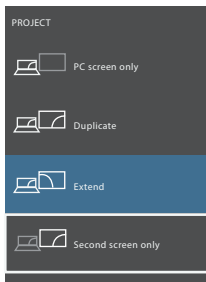

Note: If you cannot see the additional monitor(s) listed, click Detect. If does not work, try restarting your computer and do steps again.

Rotate the Screen

 - 1: Verify that your cables are connected properly to the new monitors.
- 2: Right-click anywhere on your desktop and select Display settings to open the Display page.
- 3: Under the "Select and rearrange displays" section, select the monitor that you want to adjust.
- 4: Under the "Scale and layout" section, use the Orientation drop-down menu to select Landscape or Portrait screen.

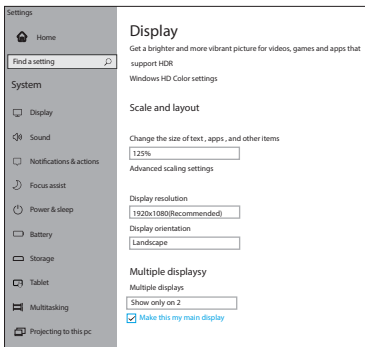

Chapter 06 Q&A

Q: The monitor keeps switching and flicker, although it connected to outlet for extra power supply.

A: This situation is generally caused by insufficient voltage; Please check whether the factory-packed cables are used, and then check whether an external PD power supply is used.

Q: Can we supply energy from power bank without using self power adapter?

A: That depends on the output of the power bank, because this monitor requires at least 15W power supply.

And if the output of your power bank is only 10W , this power bank will not supply enough energy for the monitor.

The output of power adapter we provide is 15W, so a power bank with output above 18W is recommended.

Q: Is it possible to set the default contrast? I have to adjust each time from 10% to 70%, each time I connect to my Macbook Pro laptop.

A: How to save the settings of brightness, volume, etc.

When the HDMI port is used for display and monitor powered by Type C port, all the settings will be saved automatically.

But when the Type-C port is used for display without external power supply, brightness and volume will not be saved after the monitor is powered off, this design is to avoid that the monitor doesn't work when connected to phones which could not provide enough power for monitor with high brightness setting. So to avoid the brightness is reset everyday, please give the monitor an external power supply with Type C port and do not cut off the power.

Actually, all the portable monitors on Amazon all have this same design.

Q: Touchscreen isn't responsive or not working.

A: 1. For mobile phones

① Touchscreen is not working when connecting to a mobile phone supporting USB3.1. Please contact us to upgrade the display program.

② Touchscreen isn't responsive or not working if the phone doesn't support USB3.1. Please check the phone model to ensure if it supports USB3.1.

2. For game devices (Nintendo, XBOX, PS4, etc.), the touch-function is unresponsive.

3. For Computer/Micro-host. Please check the connection. Please use the genuine cable provided. Incorrect connection may arouse touch-function unresponsive in most cases.

4. If the connection is correct and the touch-function is still unresponsive. Please try another computer. If it failed, please contact us for the replacement of the touch cable.

Chapter 07 Service Support

Dear Customer,

Thank you for purchasing the portable touch screen monitor.

We offer 100% money back guarantee in 30 days and 90 days replacement, 24 months warranty for any issue, professional technical support to ensure no-worry service. Any questions or problems, please contact us via upernectglobal02@163.com

