


UPERFECT[®] Portable Monitor User Manual

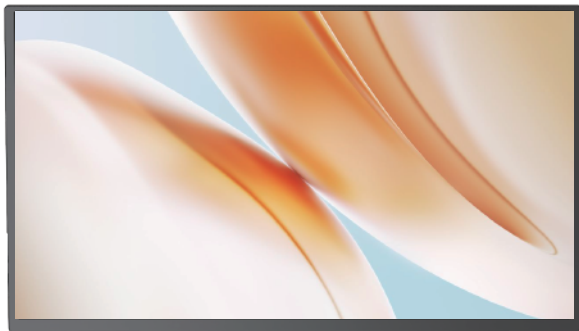

In order to ensure your safe use of this product, please read this manual carefully before using this product and keep it properly.



Email: uperfectglobal02@163.com

Chapter 01 Preparations

Checking the Package Contents



Portable Monitor



Power Adapter



User Guide



Mini HDMI to Standard HDMI Cable



Type-C to Type-C Cable *2


Note:

- If any of the above items is damaged or missing, please contact us immediately. (uperfectglobal02@163.com)
- The appearance of the components may differ from the images shown.

The functions of the bracket




The bracket supports 180° opening

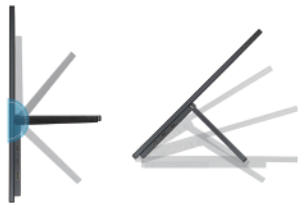

0°~180° Adjustable

Interface Function Introduction

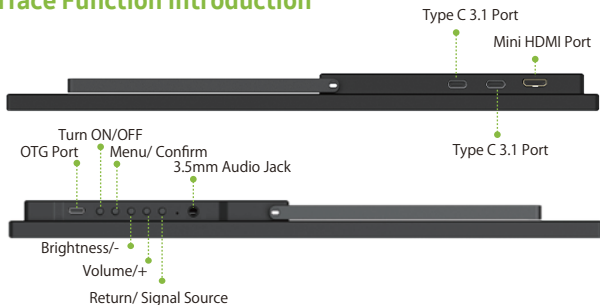

A. Micro USB-B OTG Port

Connect to mouse/ keyboard

B. Turn ON/OFF

Press to Turn ON/ OFF the monitor

C. Menu/ Confirm

Press to enter Menu or Confirm your choice

D. Quick adjust Volume/ +

Press to quick adjust Volume.Press to Next Step/ Increase

E. Quick adjust Brightness/ -

Press to Former Step/ Decrease

F. Return/ Quick adjust Signal Source

Press to Return.Press to quick adjust Signal Source

G. 3.5mm Audio Jack

Headphone/ Sound Box Extension Port

H & I. Type C 3.1 Port

For signal and power transmission

J. Mini HDMI Port

Audio and Video signal transmission


Chapter 02 Specifications

Color	Black
Resolution	1920*1080
Refresh Rate	240Hz
Aspect Ratio	16:9
VESA	M4*4mm
Interfaces	Mini HDMI Port
	Type C 3.1 Port * 2
	Micro USB-B OTG Port
	3.5mm Audio Jack
Panel Type	IPS

Chapter 03 Connecting

TYPE-C signal transfer

Note: For a more stable power supply, it is recommended to use our original power adapter to power.

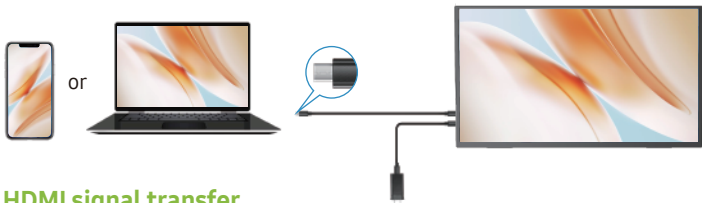

HDMI signal transfer


Note: For a more stable power supply, it is recommended to use our original power adapter to power.



Chapter 04 Screen Adjustment


On-Screen Display Menu Introduction

PICTURE

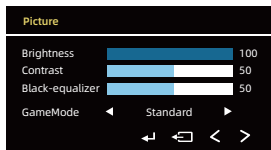


GameMode: Standard/ RTS/ FPS

OSD SETTING

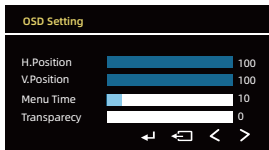


TEMPERATURE

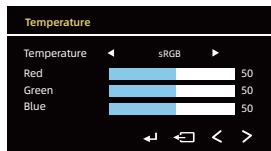


Temperature: User/ 9300/ 7500
/ 6500/ 5800/ sRGB


OPTION

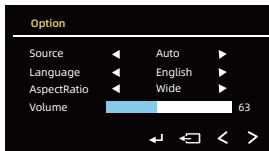


ADVANCE

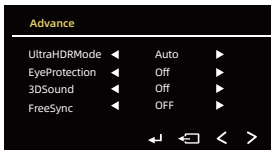


COLOR EFFECT

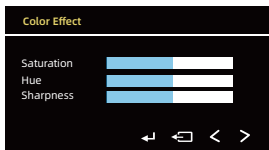

RESET

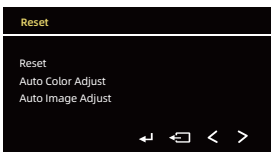

INFORMATION

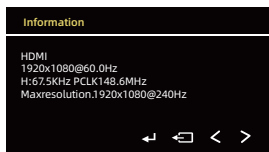


Chapter 05 Setting Up(Windows10)

Extend Mode / Duplicate Mode/ Display Mode Way1: Set on the device's Display Settings

A: Right-click anywhere on your desktop and select Display settings to open the Display page.

B: Scroll down to Multiple displays, then select an option from the drop-down list to determine how your desktop will display across your screens.

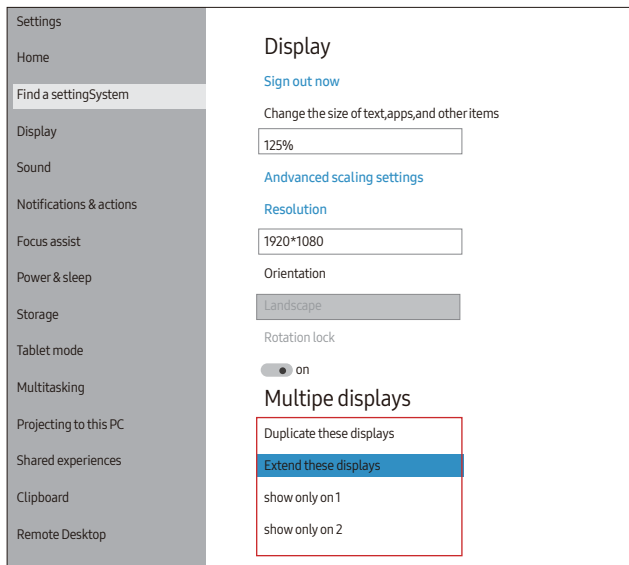


Way2: Set via Windows key + P keyboard shortcut

A: Enter the "Windows" key and "P" keyboard at the same time.


B: select an option from the drop-down list to determine how your desktop will display across your screens.

PC screen only

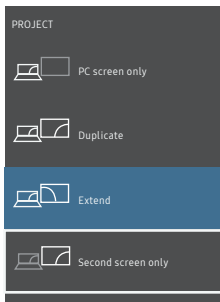

Rotate the Screen

- 1: Right-click anywhere on your desktop and select Display settings to open the Display page.
- 2: Under the "Select and rearrange displays" section, select the monitor that you want to adjust.
- 3: Under the "Scale and layout" section, use the Orientation drop-down menu to select Landscape or Portrait screen.

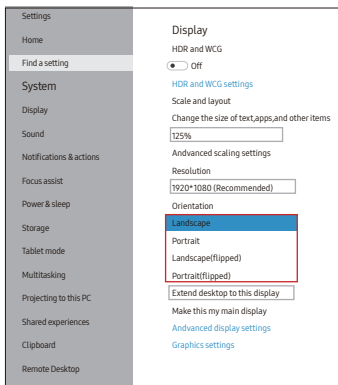

Chapter 06 Q&A

Q: Abnormal conditions occurred - like the splash screen or spots when using the monitor. The monitor is constantly restarting.

A: 1. It is caused by an insufficient power supply. Monitor required large power support. Please use the attached genuine cable provided to power the monitor.
2. If use the mobile power bank to power the monitor, please confirm whether the mobile power bank is a PD power bank that has reached 30W or more. Please contact us if you need a power bank.
3. If the resolutions above do not work, please try another computer device. If it failed, please contact us for the replacement of the cable.

Q: The monitor fails to start and the screen is blank.

A: 1. Please TURN ON the power supply.
2. Please check whether the connection is correct. Please unplug the cable and reconnect. Please use the genuine cable and the power adapter.

Note: Most Samsung mobile phones can not power for the monitor, please power the monitor with an additional power adapter.

3. Please contact us if the troubleshooting above does not help.

Q: The display is TURN-ON, shows "NO SIGNAL" or "POWER SAVING".

A: 1. Please check if the mobile phone supports USB3.1./Thunderbolt 3. when you are using Type-C to Type-C to connect the monitor and the mobile phone. An HDMI adapter is required to transfer the signal if your mobile phone does not support USB3.1./Thunderbolt 3.
2. Please check whether the connection is correct. Please use the genuine cable provided.
3. Please try another computer. If it failed, please contact us for the replacement of the cable.

Chapter 07 Service Support

Dear Customer,

Thank you for purchasing the Portable USB Monitor!

We offer 100% money back guarantee in 30 days and 90 days replacement, 12 month warranty for any issue, professional tech support to ensure no-worry service.

Any query or problem, please contact us via

upernectglobal02@163.com

